

Measuring for Honeycomb Blinds Inside Fit

1

Be sure to measure accurately – Fitting honeycomb blinds inside the jamb makes most sense thermally. Ensure you have enough available jamb depth for the specific honeycomb blind type you have chosen. Avoid mistakes by taking your time. Measure tight, wood to wood. Don't make deductions – the factory will do that



2

Measure for width – Measure the width of the jamb in three places: at the top, in the middle, and at the bottom. Make sure you hold both ends of the tape measure on the **inside** edges of the jamb. Note the **smallest** width measured. Provide dimensions in **millimetres**





3

Measure the drop – Measure the drop of the window jamb in three places: on the left, in the centre, and on the right-hand side. Make sure you hold both ends of the tape measure on the **inside** edges of the jamb. Use the **shortest** drop measured – provide drop in **millimetres**





4

Supply measurements as WIDTH X DROP

Use **millimetres** (mm) for best accuracy. Provide the control side which suits best: either L (LEFT) or R (RIGHT)

EG: 678 X 1305, R

