

Measuring for Blinds Inside the Reveal

1


Be sure to measure accurately – If the window is set in a deep recess, fitting the blind inside makes for a neat finish. But mistakes in measurements can ruin them altogether



2

Measure for width – Measure the width of the recess in three places: at the top, in the middle, and at the bottom. Make sure you hold both ends of the tape measure on the **inside** edges of the recess. Note the **smallest** measurement in **millimetres** – this will be the measurement you use




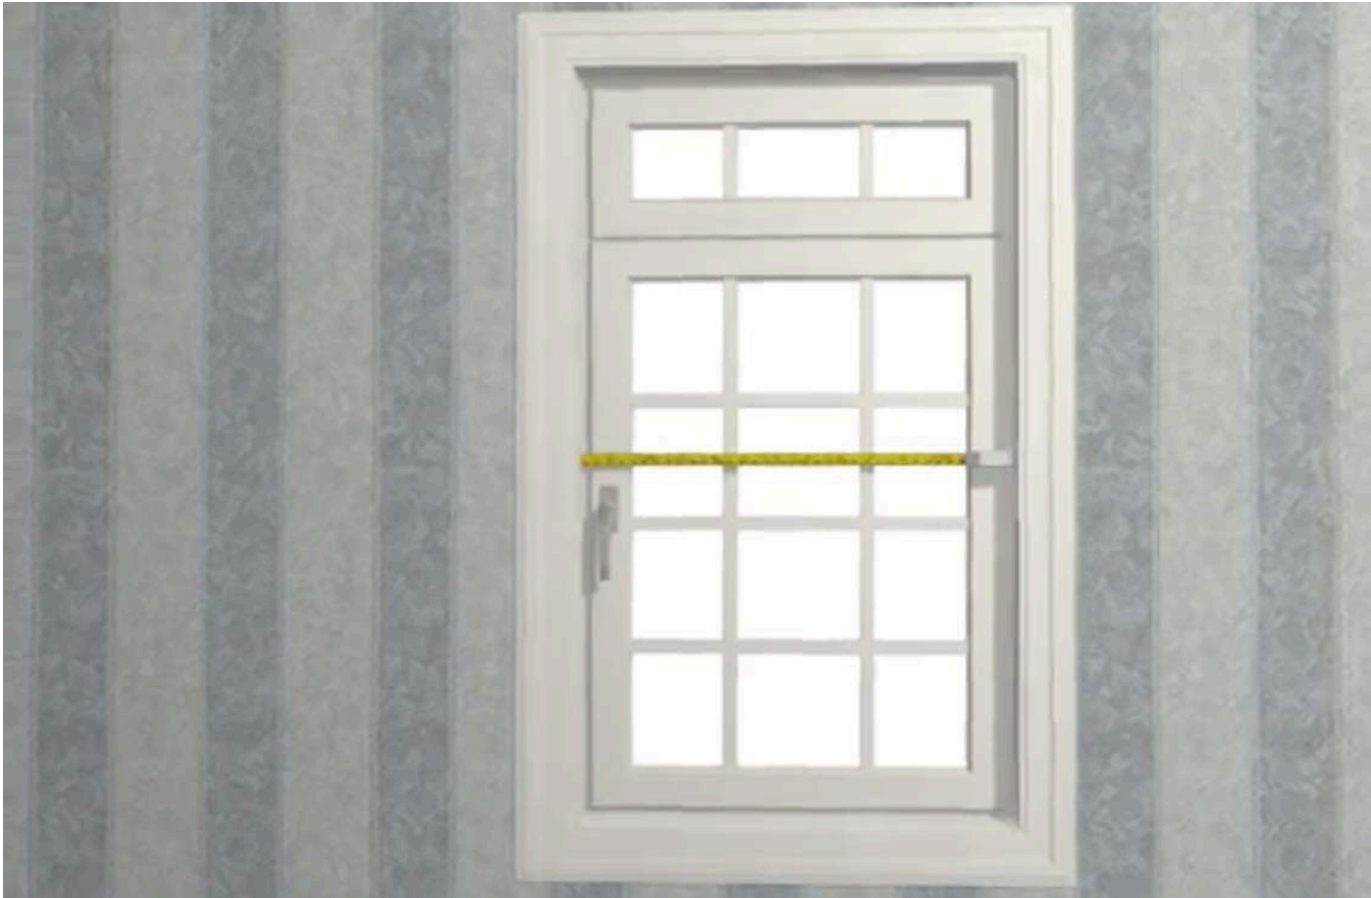

3

Measure for height – Measure the height of the window recess in three places: at the left, in the centre, and at the right. Make sure you hold both ends of the tape on the **inside** edges of the recess. Note the **shortest** measurement in **millimetres**, as this will be the one you use



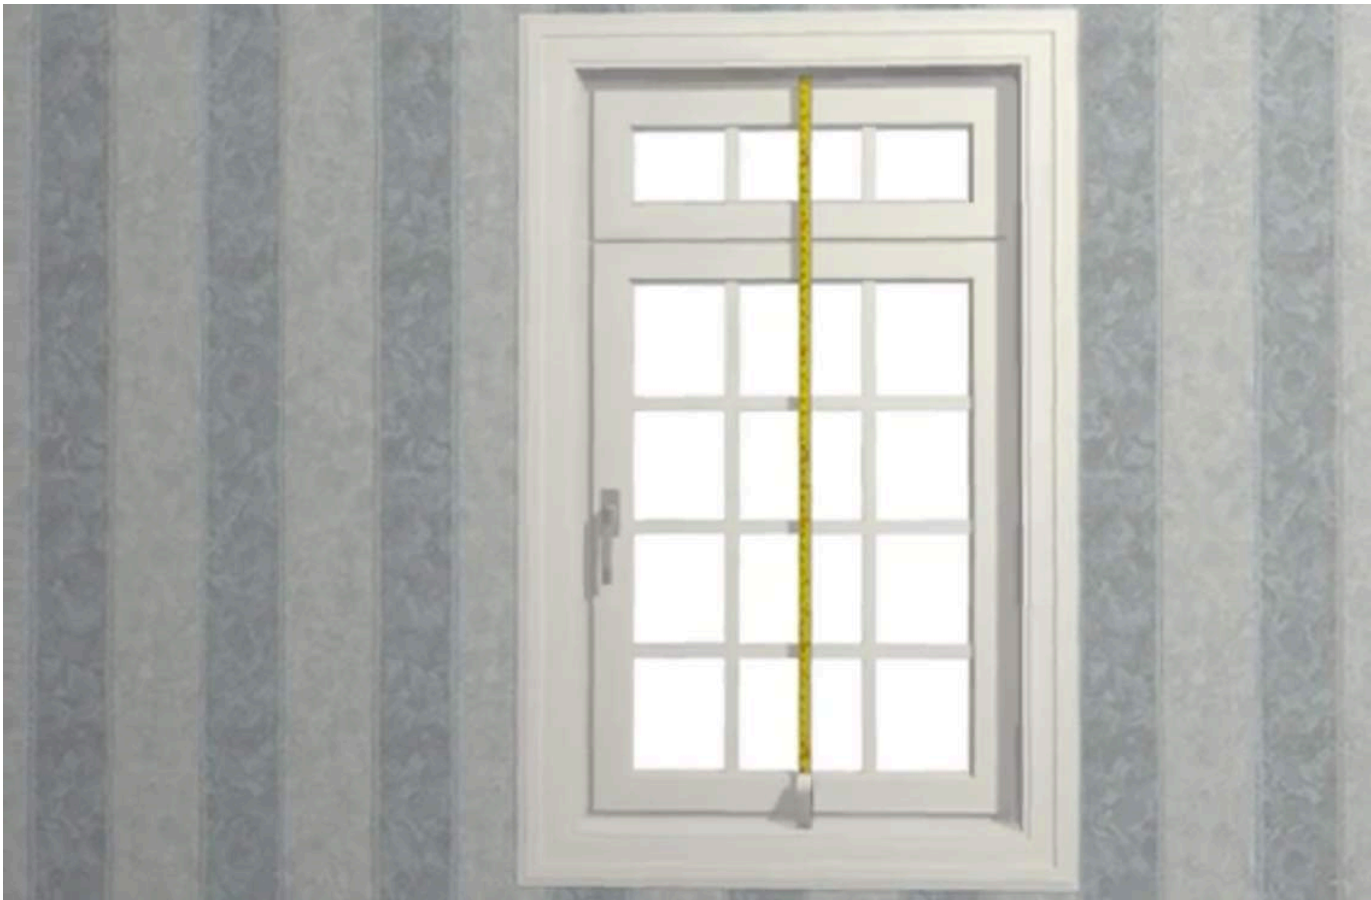

4

Supply measurements as width X drop. Use millimetres (mm) for best accuracy and also provide what window side you'd like the controls: either L (left) or R (right)

678 X 1305 R

