

## Measuring for Roller Blinds, Inside Fit

# 1

**Be sure to measure accurately** – If your window jamb is 70mm or deeper – fitting your roller blind inside fit makes for a neat finish. Take your time to measure accurately. Measure tight, wood to wood. Don't make deductions – the factory will do that




# 2

**Measure for width** – Measure the width of the jamb in three places: at the top, in the middle, and at the bottom. Make sure you hold both ends of the tape measure on the **inside** edges of the jamb. Note the **smallest width** measured.

Provide dimensions in **millimetres (mm)**



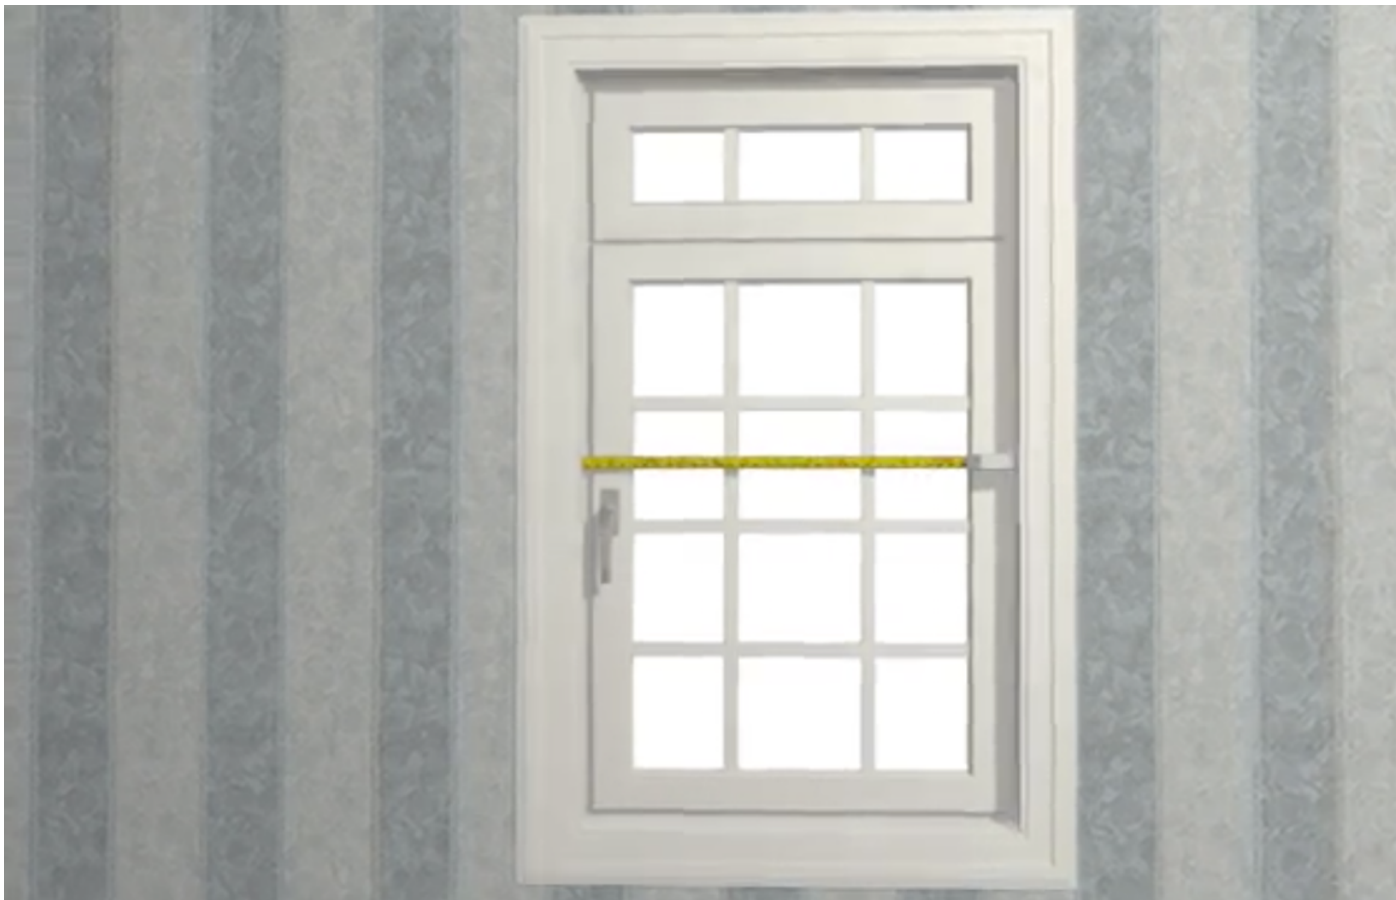

# 3

**Measure the drop** – Measure the drop of the window jamb at least twice. The drop isn't so crucial for roller blinds as there is always extra fabric in the roll however it is still good to be accurate. Measuring more than once ensures you are double checking what you read off the tape measure and what you jot down. Hold the tape measure vertically **inside** the jamb. Provide drop in **millimetres (mm)**







# 4

Supply measurements as **WIDTH X DROP**

Use **millimetres** (mm) for best accuracy. Provide the control side which suits best: either L (LEFT) or R (RIGHT)

**EG: 678 X 1305, R**

