

Measuring for Aluminium Blinds, Inside Fit

1



Measure accurately – If your window jamb is 35 mm or deeper for the 25 mm aluminium blinds (65 mm+ for 50 mm aluminium), fitting your Venetian blind inside the jamb makes for a neat finish. Measure tight, wood to wood. Don't make deductions – the factory will apply the required allowances



2

Measure the width – Measure the width of the jamb in three places: at the top, in the middle, and at the bottom. Hold the tape measure firmly against the **inside edges** of the jamb. Record the **smallest measurement** and provide dimensions in **millimetres (mm)**



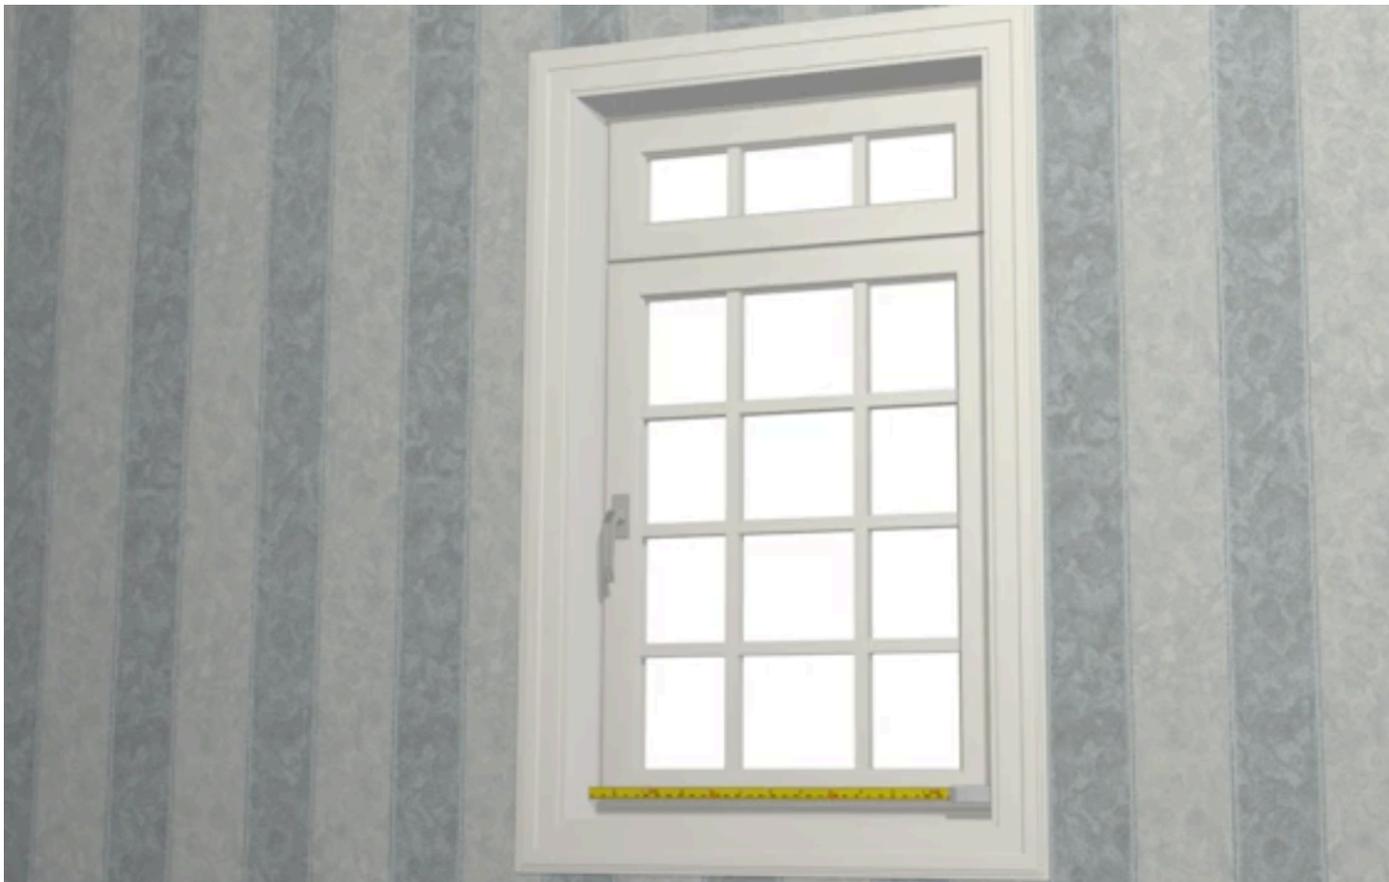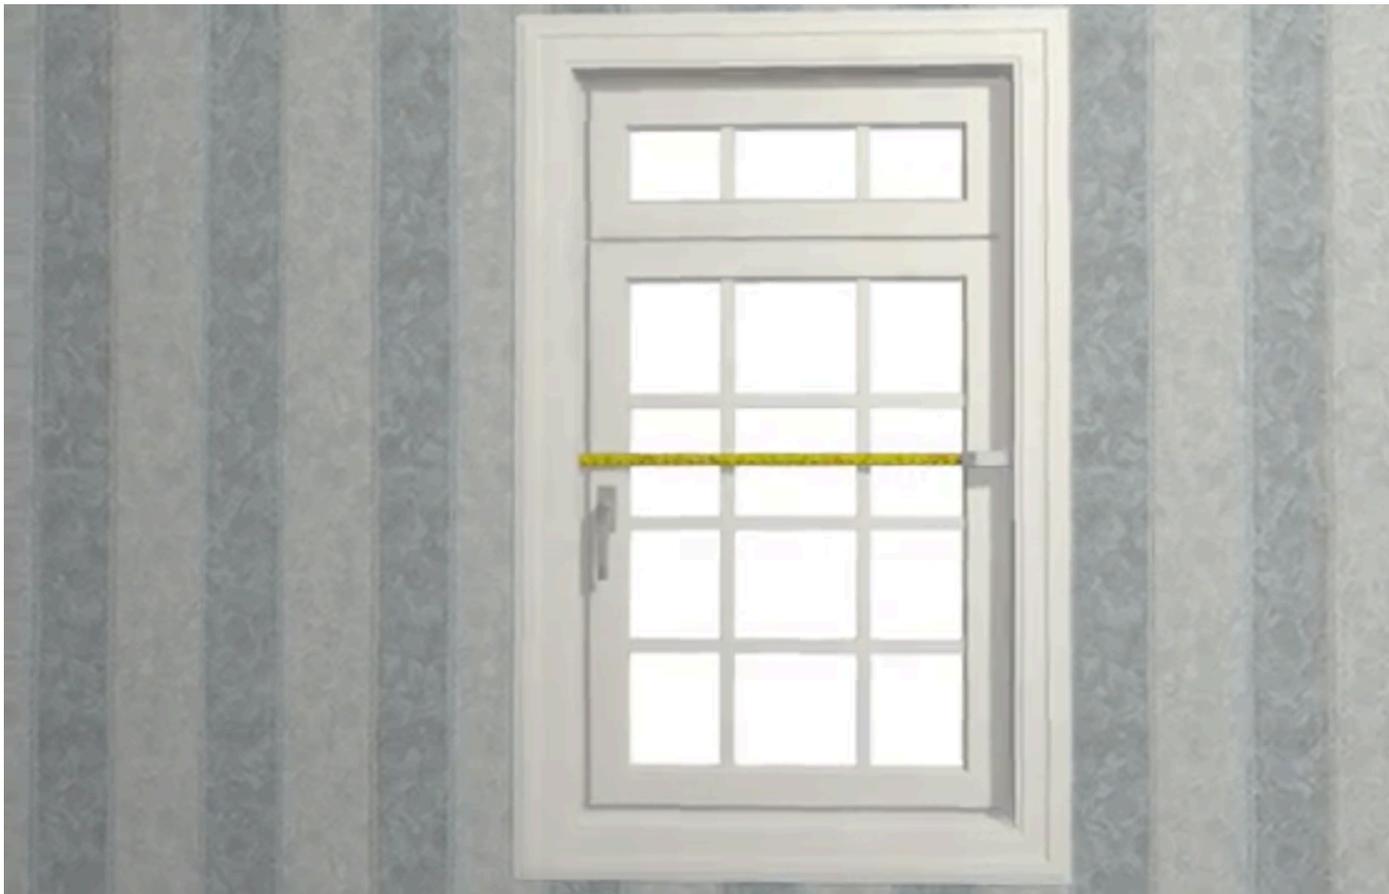

3

Measure the drop – Measure the drop of the window jamb in three places and record the smallest measurement. This helps ensure the bottom rail hangs evenly and clears the sill correctly. Hold the tape measure vertically **inside the jamb** and provide the drop in **millimetres (mm)**





4

Supply measurements as **WIDTH X DROP**

Use **millimetres** (mm) for best accuracy. Provide the control side which suits best: either L (LEFT) or R (RIGHT)

EG: 678 X 1305, R

