
# Read the instruction before operating your shade

# Installation & Maintenance Instructions Honevcomb Shade 25mm SmartFit™





SmartFit<sup>™</sup> Model A Shade width ≤1270mm

SmartFit<sup>™</sup> Model B Shade width >1270mm

### **Getting Started**

Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

#### Recommended Tools

- · Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil

You will need to use the following fasteners for your particular mounting surfaces:

| parasaa maanang sanasas. |  |
|--------------------------|--|
| Surface                  | Fastener                                     |
| Wood                     | Screws (Provided)                            |
| Drywall/Plaster          | Wall Anchors, Expansion Bolts (Not Provided) |
| Metal                    | Sheet Metal Screws (Not Provided)            |

## **Check Hardware**

38mm Screw





Handle










PVC light guard (Optional)

#### Step1: Prepare the Shade for Installation


Carefully unwind the cord in the opposite tied direction. Remove the cardboard and PE bag. The rail with magnet installed on the ends is the top rail.

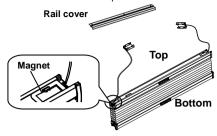

# Step2: Rail Cover, Shoe Base and Bracket Installation


#### Inside Mount - Rail Cover Installation

The minimum distance from the left/right side wall to the end of rail cover is 3mm and the distance from the center of screw hole to edge of wall is 25.4mm and it is 14.3mm from the center of screw hole to the side frame edge. Secure the rail cover with 25mm screws through the screw holes pre-dilled on the cover.



#### Inside Mount - Shoe Base Installation


Match the outer edge of the shoe base to the marked position. The minimum distance from the bottom left/right side wall to the outer edge of the base is 3mm and the minimum distance from the edge of wall to the center of the screw hole is 16mm. Install the shoe base with one 25mm screw.



For shade width reaches 1270mm with center cord, after installing shoe bases at the ends, install one shoe base in the center and keep it align with the end shoe bases and the left one at the top center.


#### Outside Mount -L Bracket Installation

Top: For outside mount, the shoe base. and L bracket has been pre-installed on the rail cover.



Keep L bracket parallel with the window frame and secure the L Bracket with 2pcs 38mm screws to the wall.

**BOTTOM:** The distance between the top and bottom L bracket screw holes should be the shade drop subtracts 32mm. Mount top L bracket with 2pcs 38mm screw, and mount bottom L screw with 2pcs 25mm screw. Attach L bracket cover. Secure the shoe base onto L bracket with 1pc bolt.



For shade width reaches 1270mm with center cord, after installing L bracket at the ends, install one L bracket in the center at bottom, and keep the bottom center shoe base align with the left one at the top center.

Recommendation: avoid the gypsum board surface.

# Step 3: Install Light Guard (Optional for IB) Please install the light guard before installing the

a. The light guard is to be placed at back of the shade at left & right side.

Place the light guard vertically towards the bottom window frame. To avoid scraping, leave a 2mm gap between fabric stack and light guard. And then mark out the location with a pencil.

Remove the double sided tapes and carefully paste the light guard in position.

Note: The light guard on both sides are identical;

Use the double-sided tape on the narrow side of the light guard to attach to the window frame.







Light guard

#### Step4. Install the Shade

Install the shoe slider onto shoe base by pushing down the shoe slider from top of the notch then slide to the side to match the shoe base. Make sure that cords are nice, tight and not tangled.

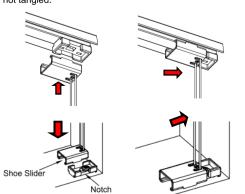




For child safety, please check and ensure that there are no loose cords after the shade is completely installed.

### Step5. Handle Installation

Slide the handle onto the plastic piece pre-attached to the




#### Step6. Adjust the Shade

After the shade is completely installed, use the handle to raise the shade up to the top and adjust the shade to level. Then you may operate the shade to any desired position.

# Step7. Remove the Shade

Operate the shade to the middle from top and bottom. Remove the shoe slider from the shoe base.



#### Cleaning Instructions

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).