


Read the instruction before operating your shade

Installation & Maintenance Instructions

Honeycomb Shade

45mm SmartFit™

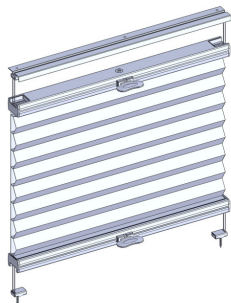

Getting Started




Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

Recommended Tools

- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil



You will need to use the following fasteners for your particular mounting surfaces:

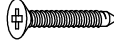Surface	Fastener
Wood	Screws (Provided) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 

Check Hardware



L Bracket



Handle



Shoe Base



38mm Screw




Bolt



25mm Screw


Step1. Prepare the Shade for Installation



Carefully unwind the cord in the opposite tied direction. Remove the cardboard and PE bag. The rail with magnet installed on the ends is the top rail.

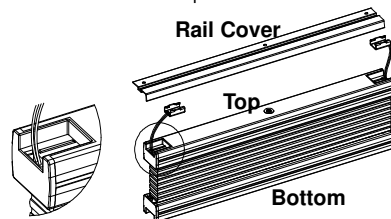


Step2. Rail Cover, Shoe Base and Bracket Installation



Inside Mount – Rail Cover Installation

The minimum distance from the left/right side wall to the end of rail cover is 3mm and the distance from the center of screw hole to edge of wall is  32mm for 45mm Single. Secure the rail cover with 25mm screws through the screw holes pre-drilled on the cover.

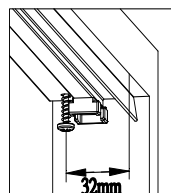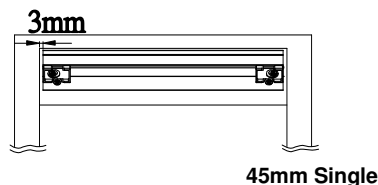


Inside Mount – Shoe Base Installation

Match the outer edge of the shoe base to the marked position. The minimum distance from the bottom left/right side wall to the base side is 3mm and the minimum distance from the edge of wall to the center of the screw hole is  23mm for 45mm single. Install the shoe base with one 25mm screw.

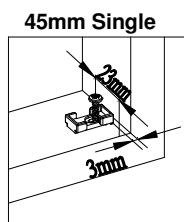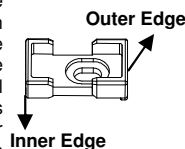


Outside Mount – L Bracket Installation

For outside mount, the shoe base, L bracket, and magnet catch (if needed) has been pre-installed on the rail cover. Place the rail cover at the desired position, and allocate a minimum distance of 16mm from the center of screw hole to the edge of the wall as shown below. Keep L bracket parallel with the window frame and secure the L bracket with 2 pcs 38mm screws to the wall.

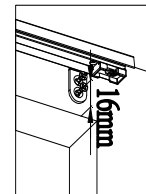



The distance between the center of screw holes of top and bottom L bracket should be the shade drop subtracts 28mm. Mount L bracket with 2 pcs 38mm screw. Secure the shoe base onto L bracket with 1pc bolt.

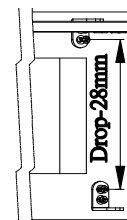

Recommendation: avoid the gypsum board surface.

Step3. Install the Shade



Install the shoe slider onto shoe base by pushing down the shoe slider from top of the notch then slide to the side to match the shoe base. Make sure that cords are nice, tight and not tangled.

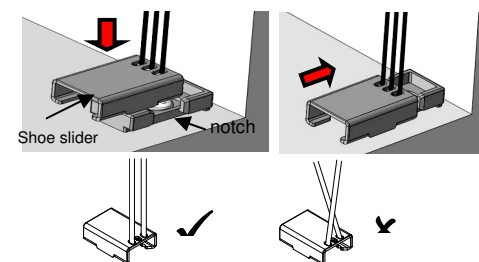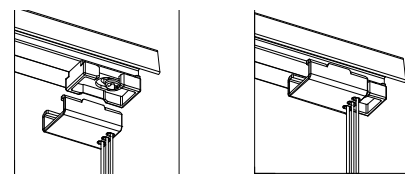

For child safety, please check and ensure that there are no loose cords after the shade is completely installed.

Step4. Handle Installation

Slide the handle onto the plastic piece pre-attached to the rails.

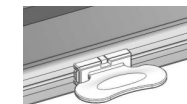
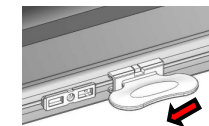


Step5. Adjust the Shade

After the shade is completely installed, use the handle to raise the shade up to the top and adjust the shade to level. Then you may operate the shade to any desired position.

Step6. Remove the Shade

Operate the shade to the middle from top and bottom. Remove the shoe slider from the shoe base.

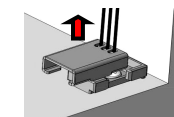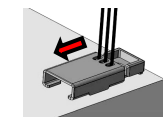

Cleaning Instructions

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).