

Remote Control

Model#RC-A01

Product Specification

1. Model : RC-A01
2. Dimensions : L 135mm x W 50mm x H 9.5mm
3. Weight (including battery) : 62g ± 5g
4. Battery/Voltage : CR2032 3V (Lithium coin battery)
5. Radio Frequency : 2.4GHz
6. Operation Temperature : 0°C - 50°C / 32°F - 122°F



BUTTON OVERVIEW


Stop
Press to stop shade at any location.

LOWER

CLOSE
Move shade to fully closed.

Shade Group
Select or unselect group number(s) to control or set.

ALL Shades
Select all shades.

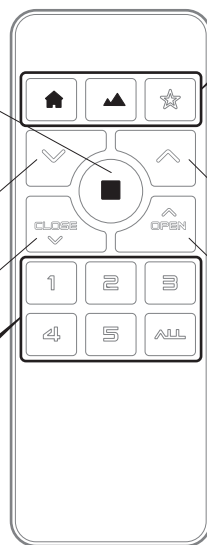

🏠 : Best Privacy
▲ : Best View
★ : My Favorite


IMPORTANT!
Above functions will be available after all limits of shade are set up.

RAISE

OPEN
Move shade to fully open.

i
The function of **LOWER** & **RAISE** & **CLOSE** & **OPEN** buttons may vary depending on the shade type. Please refer to the product manual.

Remove remote back cover to reveal **SET BUTTON** and **RESET BUTTON**.

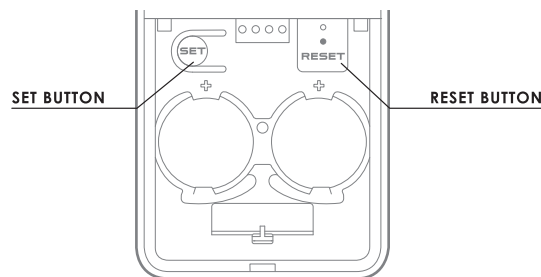



REPLACE BATTERY

Recommended that you turn over the remote and hold it upside down for easier operation.


Simultaneously press the latch of the battery cover while lifting it to open.



The remote control comes with 2xCR2032 batteries included. Remove remote back cover, then remove pull tab before use.

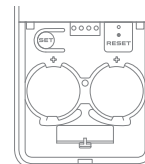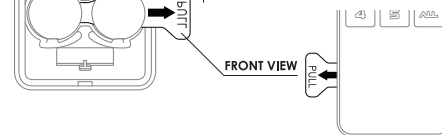

Install batteries with positive(+) side facing up.

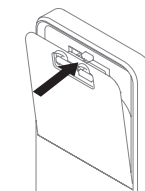

Place the battery cover back.

SELECT A GROUP



Please press the group 1 ~ 5 as required. The selected group light is on.

GROUP CONTROL




Group "ALL" is pre-set to control all shades paired to the remote control.

PAIRING REMOTE WITH SHADE

IMPORTANT! Please always pair only one SAME type of shade to the same group for better operation experience.


Step 1: On Shade

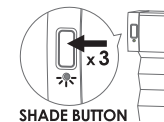

Press **SHADE BUTTON** 3 times. The green light start blinking, while shade is ready for pairing.

Step 2: On Remote

Remove remote back cover to reveal **SET BUTTON**.




Press and hold **SET BUTTON** for 3 seconds, and group lights will blink, the remote is in SETUP mode.

Step 3: Pairing Remote with Shade



Choose a desired group. The selected group blinks.



Press and hold **SET BUTTON** for 3 seconds, and group lights will stop blinking, and the selected group light is on. Then, the remote exits setup mode.

i SETUP mode will time out after 20 seconds of inactivity.

CLEAR PAIRING REMOTE WITH SHADE

Repeat above step 1 ~ 2, and select the same group on step 3 will clear up pairing between remote and the shade.


CHANGE REMOTE GROUP FOR THE SHADE

Clear existing group pair first, then repeat above step 1 ~ 2, and select a different group on step 3 will change the remote group for the shade.


SET / CLEAR UPPER LIMIT

CAUTION! To avoid unwanted setup for other shades, please always pair the target shade in a separate group before starting setup.

Step 1: Move the shade to desired location.

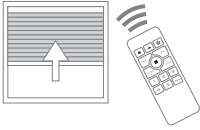

Step 2: Remove remote back cover to reveal **RESET BUTTON**.

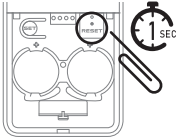

Using a pin (not provided) to press and hold the **RESET BUTTON** for **1 second**. The group lights will start flashing - the remote is now in RESET Mode.

Step 3: Choose the group which paired to the shade.
The selected group flashes.



Step 4: Press **OPEN BUTTON** to save upper limit.



Setup Success
Shade Response

SHIFT x 1



CLEAR UPPER LIMIT

Repeat Step 1 ~3, and press and hold **OPEN BUTTON** for **1 second** on Step 4 to clear upper limit.



Setup Success
Shade Response


SHIFT x 2




SET / CLEAR LOWER LIMIT

CAUTION! To avoid unwanted setup for other shades, please always pair the target shade in a separate group before starting setup.

Step 1: Move the shade to desired location.

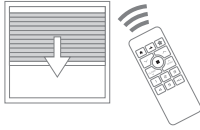

Step 2: Remove remote back cover to reveal **RESET BUTTON**.

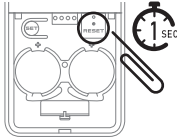

Using a pin (not provided) to press and hold the **RESET BUTTON** for **1 second**. The group lights will start flashing - the remote is now in RESET Mode.

Step 3: Choose the group which paired to the shade.
The selected group flashes.



Step 4: Press **CLOSE BUTTON** to save lower limit.



Setup Success
Shade Response

SHIFT x 1



CLEAR LOWER LIMIT

Repeat Step 1 ~3, and press and hold **CLOSE BUTTON** for **1 second** on Step 4 to clear lower limit.



Setup Success
Shade Response


SHIFT x 2




SET / CLEAR MY FAVORITE LOCATION

CAUTION! To avoid unwanted setup for other shades, please always pair the target shade in a separate group before starting setup.

Step 1: Move the shade to desired location.

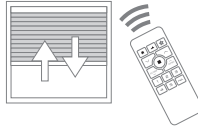

Step 2: Remove remote back cover to reveal **SET BUTTON**.

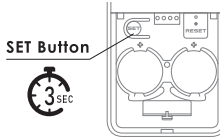

Press and hold **SET BUTTON** for **3 seconds**. The group lights will blink.

Step 3: Choose the group which paired to the shade.
The selected group blinks.



Step 4: Press **☆ BUTTON** to save my favorite location.



Setup Success
Shade Response

SHIFT x 1



CLEAR MY FAVORITE LOCATION

Repeat step 1 ~3, then press and hold **☆ BUTTON** for **1 second** at step 4 to clear My Favorite.
The shade shift x 2, and back to default Favorite Location.



Setup Success
Shade Response


SHIFT x 2



COPY REMOTE

Copy group pairing from the existing remote to a new remote.


New Remote

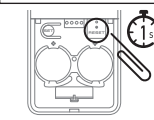

1 Press **RESET BUTTON** for **1 second** by pin (not provided), group lights start flashing.

2 Press **RESET BUTTON** **3 times**, group lights will flash quickly.

Existing Remote



1 press and hold **SET BUTTON** for **3 seconds**, the group lights start blinking.

2 Press **SET BUTTON** **3 times**, the group lights will blink 4 times.

Copy Success

New Remote


All of group lights light on for **1 second**, and out off RESET mode.

Existing Remote

Press and hold **SET BUTTON** for **3 seconds**, group lights stop blinking and out off SETUP mode.

FACTORY RESET


Step 1: Press and hold **RESET BUTTON** for **1 second** by pin (not provided).

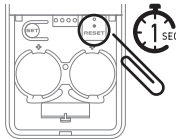

Step 2: Group lights start flashing and enter RESET mode.



Step 3: Press **RESET BUTTON** **6 times**, the group lights flash 4 times.

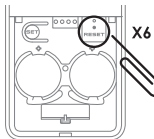

Step 4: Press and hold **RESET BUTTON** for **1 second**, and out off RESET mode.

